

# TS2 USER'S GUIDE

HIGH-RESOLUTION COLOR TOUCHPAD



powered by



ONLY BY



# GETTING TO KNOW YOUR TS2 TOUCHPAD



- 1 — Zone Off / System Off** Press to turn OFF the Zone that the touchpad is controlling. Press and hold to turn the System OFF.
- 2 — Now Playing** Press to select the main control page of the source currently selected in the Zone.
- 3 — Page Scroll** Press to select additional pages of information for the source or device currently being controlled.
- 4 — Display** Provides information about the source or device currently being controlled.

- 5 — Volume Control** Press to adjust volume up and down.
- 6 — Mute** Press to mute or un-mute the audio.
- 7 — Up and Down** Press to “step” up or down when controlling a device. Example: channel up or down when controlling a tuner or cable box.
- 8 — Sub-system Select** Press to access controls for additional subsystems like Security, HVAC, Lighting, etc

# CARE FOR YOUR TOUCHPAD

- The TS2 Touchpad is designed to respond to a simple fingertip press for most uses. Too much force, a sudden impact or concentrated pressure can damage the protective film or break the glass panel.
- Constant pressure from an object to the touchpad can cause the generation of a false signal which may lockup the electronic control circuit. Be careful not to let objects rest against the panel.
- Avoid placing adhesive materials on the touchscreen. Post-It® Notes, Scotch™ tape, and adhesive labels can release chemicals that will discolor or distort the polyester film.
- Moisture, direct sunlight and extreme temperature shifts can negatively affect and/or damage the operation of your touchpad. If you have concerns with placement of the touchpad in relation to extreme temperature, direct sunlight or moisture, please let your installer know immediately.
- To clean the polyester film, first use a soft dry cloth to remove contamination. If dust or smudges are still present, use a damp cloth that has been squeezed of excess water to remove the contaminant. If contaminants are still present, use a non-abrasive cleaner or detergent to clean the polyester film. Use of strong chemicals and/or some cleaning agents may discolor the polyester film. The following cleansers have been tested and approved for cleaning an TS2 Touchpad:

Windex® Glass Cleaner • Formula 409® Cleaner • Mr. Clean®

**elanhomesystems.com**



©2010 ELAN Home Systems, Lexington KY. All rights reserved. ELAN Home Systems is a registered trademark of ELAN Home Systems, LLC. All other trademarks are the property of their respective OWNERS. P/N 9901055 REV A